

COS-07CTMSSB / QUICK START GUIDE


THANK YOU FOR PURCHASING YOUR NEW COSMO MICROWAVE

- PLEASE DO NOT RETURN TO THE STORE -

If you have questions, please call the experts.

HELP LINE: 1-888-784-3108 or Visit: www.cosmoappliances.com

Control panel

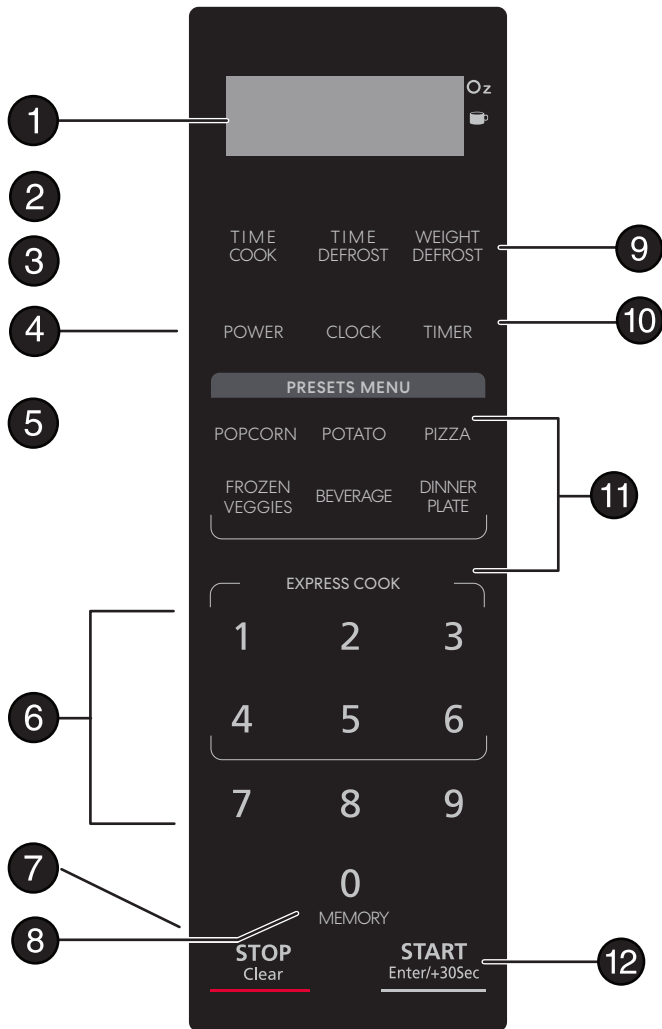

| # | ITEM | DESCRIPTION |
|----|----------------|---|
| 1 | Display | In standby mode, displays the time. In cooking mode, displays cooking time, weight, and other information. |
| 2 | Time Defrost | Press this button, then enter the time you want for an item to defrost. |
| 3 | Time Cook | Press this button, then enter the time you want for an item to cook. |
| 4 | Power | Press to set the power level of your microwave, then press the number buttons to set the level you want (0-10). See "Understanding and setting the power level" on page 12. |
| 5 | Clock | Press to set the clock, then press the number buttons to enter the current time. |
| 6 | Number buttons | Press to enter cook time, defrost time, clock time, and other information. |
| 7 | STOP/Clear | Press to stop the cooking process. Press again to cancel the cooking operation. |
| 8 | Memory | Press this button to set up to three memorized procedures. |
| 9 | Weight Defrost | Press this button, then enter the weight of the item you want to defrost. The cooking time is set automatically. |
| 10 | Timer | Press this button, then enter the time you want to count down. |
| 11 | Auto menu | Press one of these buttons to automatically cook the item indicated. |
| 12 | Start/+30 SEC. | In standby mode, press this button to begin cooking. While cooking, press this button to add 30 seconds to cooking time. |

EXPRESS COOKING

From standby mode you can instantly cook something at 100% power by selecting a cooking time from one to six minutes.

- Press any number from **1** to **6**. Cooking begins immediately.
 - Press **START/+30SEC.** again to increase cooking time in 30 second increments. The maximum cooking time is 99 minutes and 99 seconds.
- OR-
- Press **START/+30SEC.** to cook the item at 100% power level for 30 seconds.
 - Press **START/+30SEC.** again to increase cooking time in 30 second increments. The maximum cooking time is 99 minutes and 99 seconds.

DO NOT USE IN MICROWAVE

| Utensils | Remarks |
|---------------------------------|--|
| Aluminum tray | May cause arcing. Transfer food into microwave-safe dish. |
| Food carton with metal handle | May cause arcing. Transfer food into microwave-safe dish. |
| Metal or metal-trimmed utensils | Metal shields the food from microwave energy. Metal trim may cause arcing. |
| Metal twist ties | May cause arcing and could cause a fire in the oven. |
| Paper bags | May cause a fire in the oven. |
| Plastic foam | Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. |
| Wood | Wood will dry out when used in the microwave oven and may split |

This appliance must be grounded. Insert plug into an outlet that is properly installed and grounded.

COMMON PROBLEM SOLVING

| PROBLEM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|--------------------------------|---|---|
| Oven will not start | The electrical cord is not plugged in. | Plug in the electrical cord. |
| | The door is open. | Close the door and try again. |
| | The wrong operation is set. | Check the instructions and try again. |
| Arcing or sparking in the oven | You are attempting to use incorrect materials in the oven. | Use only microwave-safe materials. |
| | You are attempting to use the oven when it's empty. | Do not operate the oven when it's empty. |
| Unevenly cooked foods | Spilled food remains in the oven. | Clean the oven with a wet towel. |
| | The food is not defrosted completely. | Defrost the food completely before attempting to cook it. |
| | The cooking time or power level is not adequate to cook the food. | Use the correct cooking time and power level. |
| | The food is not turned or stirred. | Turn or stir the food. |

MODEL: COS-07CTMSSB

External dimensions: (HxWxD)10.2 x 17.3 x 12.8 in.